

Your configuration



Your configuration code is

M1.CP.1.2.0.0.3.3

The transmission of the configuration code is an important piece of information for identifying your desired variant both in the quotation phase and in the order phase.

Selection

Housing length [mm]	126
Housing diameter [mm]	120


Technical data


Description	Ø	Ø
	90mm	140mm
Avg. rot. speed [min-1]	200	150
Max. Speed [min-1]	400	300
Protection class according to IEC 60529	IP 50	
Operating temperatur [°C]	-20 to +70	
Lifetime up to [m rev]	50	
Current load [A]	Max. 63	
Voltage load [V AC]	Max. 630	
Cable length rotor [m]	3	
Cable length stator [m]	3	
Total weight [kg]	2.7	

Quantity	Name	Description	Width	V	A	Ways
1	PE functional unit	At a voltage $V \geq 60$ V, a PE functional unit is automatically added to your configuration.	0		25	1
1	Functional unit C		1	250	16	4
1	Functional unit P (Ethernet)		1	30	3	Ethernet + 4

	Position	Name	Width	V	A	Ways
Front		Mounting flange		0	0	

Circuit diagram

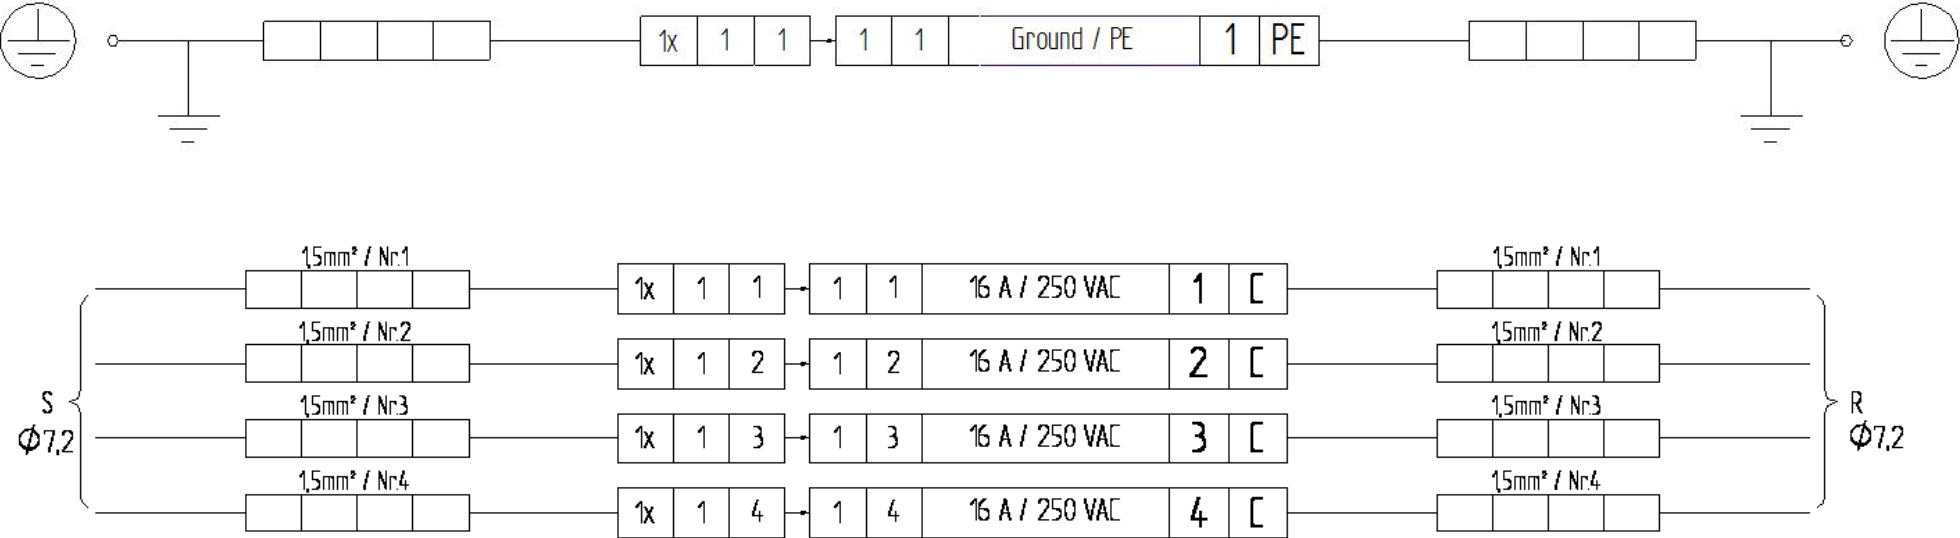

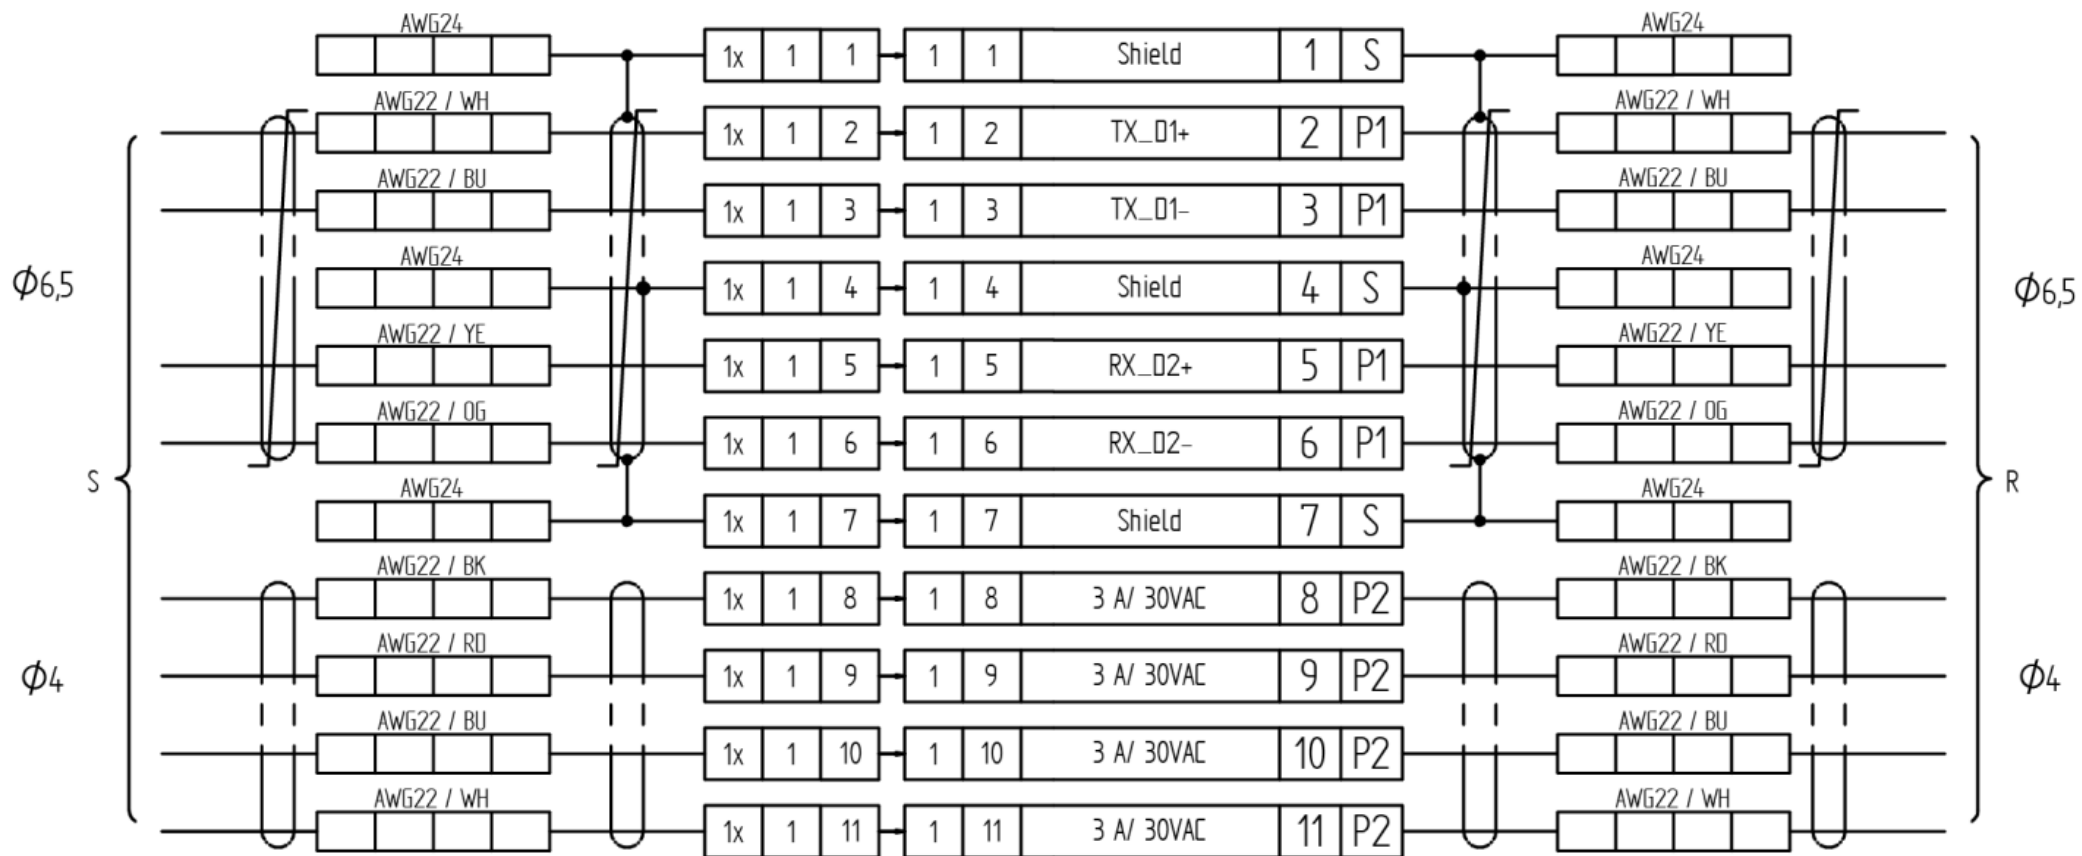

Drawing

